


Serenity Wall Top Assemblies

Nero



Lead Free

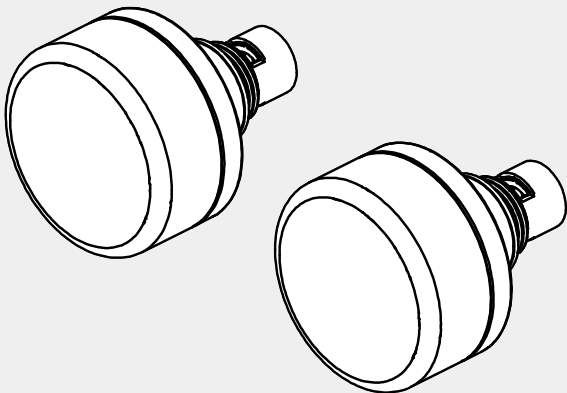

Version: 202606

Drawing	Specifications	Group Item
	Watermark License WM-060073	2x Spindles 2x Handwheels
	Temperature Rating Min 1 °C-Max 75 °C	
	Pressure Rating Min 150kpa - Max 500kpa	

Note: In Wall Body/ Breech Not Included.

*Dimensions are nominal measurements only.

Finish & SKU



Chrome



Gun Metal



Brushed Bronze



Matte Black



Brushed Gold



Brushed Nickel



Rome Bronze



Tumbled Antique Brass

Serenity Wall Top Assembly With Carrara Handle

24D005BZ/ 24D005BG / 24D005BN/24D005GM / 24D005MB / 24D005CH

Serenity Wall Top Assembly With Verde Alpi Handle

24D006BZ/ 24D006BG / 24D006BN/24D006GM / 24D006MB / 24D006CH

Serenity Wall Top Assembly With Rome Travertine Handle

24D007BZ/ 24D007BG / 24D007BN/24D007GM / 24D007MB / 24D007CH

Serenity Wall Top Assembly With Arabescato Corchia Handle

24D008BZ/ 24D008BG / 24D008BN/24D008GM / 24D008MB / 24D008CH

Serenity Wall Top Assembly With Metal Handle

24D010BZ/ 24D010BG / 24D010BN/24D010GM / 24D010MB / 24D010CH
24D010RB/ 24D010TA

Serenity Wall Top Assembly With Marquina Black Handle

24D116BZ/ 24D116BG / 24D116BN/24D116GM / 24D116MB / 24D116CH

Installation Instruction

GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that the installation complies with the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the ceramic cartridge.
- All outlets used primarily for personal hygiene must deliver water at a safe temperature in accordance with regional regulations.

NOTE:


- Do not hydrostatic test the installation with this mixer installed. Damage to the ceramic cartridge may occur.
- Do not remove the ceramic cartridge from the mixer when installing.
- After installation, all connections must be checked for leaks.
- This mixer is not recommended for use in uncontrolled heating systems such as wet-backs or solar heating units unless a suitable tempering valve is fitted.
- If limited water flow is experienced, locate aerator and filter washers and clean away foreign material as required.
- It is the responsibility of the plumber to ensure a waterproof seal is achieved between the product and mounting surface. If in doubt about the quality of the seal, remove the product and reinstall.
- The marble stone hand wheel crafted from natural marble. Each handle boasts unique variations in color, veining, and texture, making every piece one of a kind.

MAINTENANCE AND CARE:


- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.
- Avoid contact with highly pigmented substances such as red wine, coffee and ink, as they may cause permanent staining.

FINAL INSPECTION:


- Ensure the tap operates smoothly and that there are no leaks at the connections.
- Clean the area and the newly installed tap with a soft cloth to remove any installation residues.

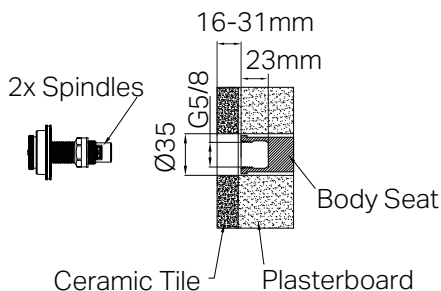


1. Install standard body seat (Not included in the package).

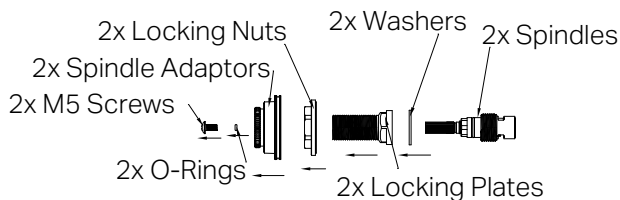


2. Disassemble pre-installed components from hot and cold spindles. Release M5 Screw to remove spindle adaptor, locking nut, locking plate and washer in sequence.

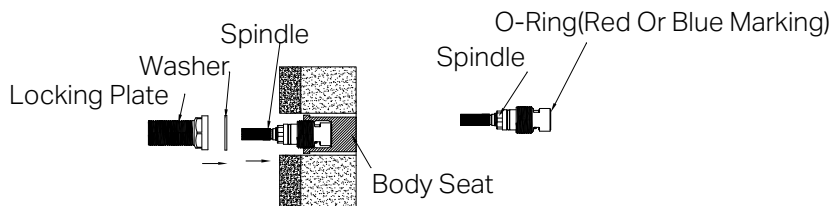


3. Thread the hot and cold spindles into the body seat. Tighten them securely, ensure not to overtighten. Reattach the washer and locking plate onto the spindle.

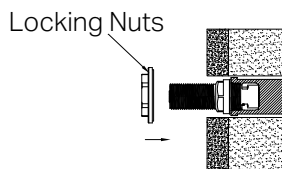


4. Thread the locking nut onto the spindle and tighten firmly to hold the assembly in place.

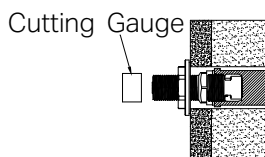





5. Screw cutting gauge onto the spindle tightly.

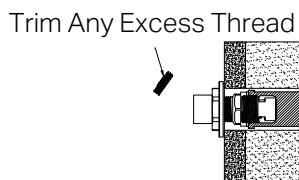

6. Trim any excess thread. Remove the cutting gauges after this step.

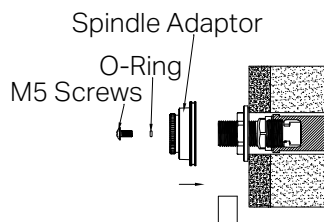

7. Attach the spindle adaptors to the spindles and secure them using the M5 screws. Ensure the O-Rings are seated properly in their grooves to maintain a watertight seal.

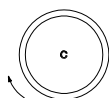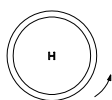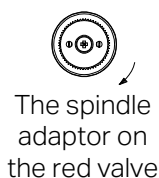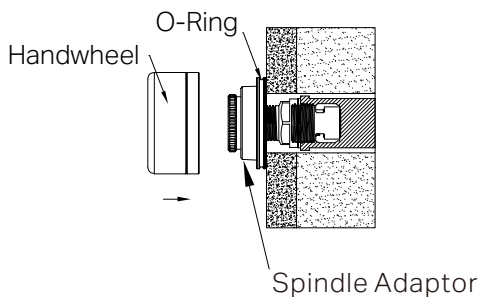  

8. Apply lubrication evenly to the O-Ring. Refer to the diagram to identify the correct O-Ring position. Ensure the O-Ring is well-lubricated to prevent damage during installation.

For Metal Handwheels:

Rotate the spindle adaptor on the red valve clockwise to its fully closed position.

Rotate the spindle adaptor on the blue valve counterclockwise to its fully closed position.

Refer to the diagram for clarification.

For Marble Handwheels:

No adjustment to the spindle adaptor is necessary.


Align the Handwheel with the Spindle Adaptor:

Ensure the splines on the underside of the handwheel align perfectly with the gears on the spindle adaptor, as shown in the above diagram.

This alignment is crucial for proper functionality.

Secure the Handwheel:

Once aligned, press the handwheel down firmly onto the spindle adaptor.

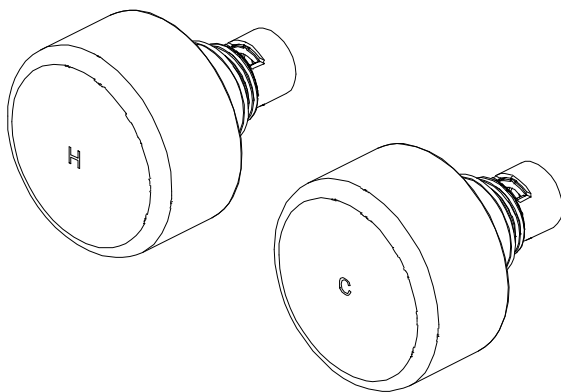

9. Turn on the drainage system and water supply, and inspect all connections for any signs of leakage.

Note: If you bought marble handwheel products, there are no hot/cold markings are applied to the handwheels.

Tip:

For metal handwheels, ensure the handwheel marked "H" is installed on the left side and the handwheel marked "C" is installed on the right side.

Nero

