 


Serenity Progressive Wall Basin Mixer 160/185/220mm Spout Trim Kit Only

Nero

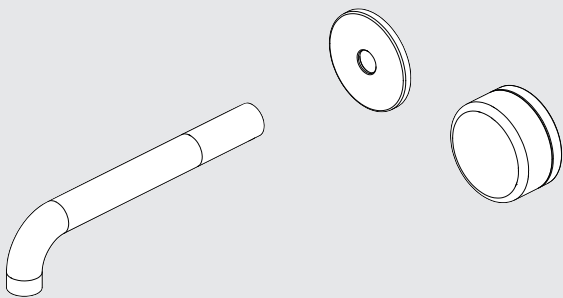 


Lead Free



Versions:202506

Drawing

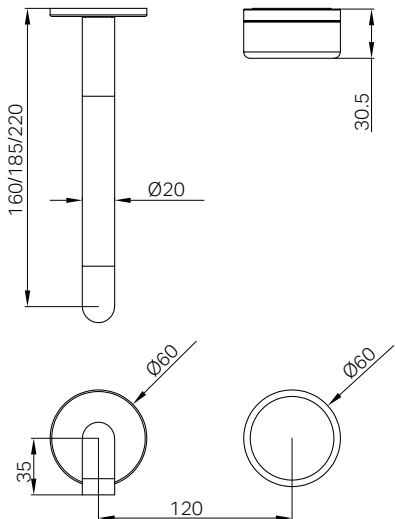

Specifications

Watermark License

WM-060073

Temperature Rating

Min 1°C-Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa

Packaging Includes

- 1x Spout
- 1x Backplate
- 1x Handwheel
- 1x Installation Kits
- 1x Non-Restricting Aerator

*Dimensions are nominal measurements only

**Includes an additional non-restricting aerator for bath use

 **Chrome**

 **Gun Metal**

 **Brushed Bronze**

 **Matte Black**

 **Brushed Gold**

 **Brushed Nickel**

Serenity Progressive Wall Basin Mixer 160mm Spout With Carrara Handle Trim Kit Only

24E103BZ/ 24E103BG / 24E103BN/24E103GM / 24E103MB / 24E103CH

Serenity Progressive Wall Basin Mixer 160mm Spout With Verde Alpi Handle Trim Kit Only

24E104BZ/ 24E104BG / 24E104BN/24E104GM / 24E104MB / 24E104CH

Serenity Progressive Wall Basin Mixer 160mm Spout With Rome Travertine Handle Trim Kit Only

24E105BZ/ 24E105BG / 24E105BN/24E105GM / 24E105MB / 24E105CH

Serenity Progressive Wall Basin Mixer 160mm Spout With Arabescato Corchia Handle Trim Kit Only

24E106BZ/ 24E106BG / 24E106BN/24E106GM / 24E106MB / 24E106CH

Serenity Progressive Wall Basin Mixer 160mm Spout With Metal Handle Trim Kit Only

24E108BZ/ 24E108BG / 24E108BN/24E108GM / 24E108MB / 24E108CH

Serenity Progressive Wall Basin Mixer 160mm Spout With Marquina Black Handle Trim Kit Only

24E125BZ/ 24E125BG / 24E125BN/24E125GM / 24E125MB / 24E125CH

Serenity Progressive Wall Basin Mixer 185mm Spout With Carrara Handle Trim Kit Only

24E109BZ/ 24E109BG / 24E109BN/24E109GM / 24E109MB / 24E109CH

Serenity Progressive Wall Basin Mixer 185mm Spout With Verde Alpi Handle Trim Kit Only

24E110BZ/ 24E110BG / 24E110BN/24E110GM / 24E110MB / 24E110CH

Serenity Progressive Wall Basin Mixer 185mm Spout With Rome Travertine Handle Trim Kit Only

24E111BZ/ 24E111BG / 24E111BN/24E111GM / 24E111MB / 24E111CH

Serenity Progressive Wall Basin Mixer 185mm Spout With Arabescato Corchia Handle Trim Kit Only

24E112BZ/ 24E112BG / 24E112BN/24E112GM / 24E112MB / 24E112CH

Serenity Progressive Wall Basin Mixer 185mm Spout With Metal Handle Trim Kit Only

24E114BZ/ 24E114BG / 24E114BN/24E114GM / 24E114MB / 24E114CH

Serenity Progressive Wall Basin Mixer 185mm Spout With Marquina Black Handle Trim Kit Only

24E126BZ/ 24E126BG / 24E126BN/24E126GM / 24E126MB / 24E126CH

Serenity Progressive Wall Basin Mixer 220mm Spout With Carrara Handle Trim Kit Only

24E115BZ/ 24E115BG / 24E115BN/24E115GM / 24E115MB / 24E115CH

Serenity Progressive Wall Basin Mixer 220mm Spout With Verde Alpi Handle Trim Kit Only

24E116BZ/ 24E116BG / 24E116BN/24E116GM / 24E116MB / 24E116CH

Serenity Progressive Wall Basin Mixer 220mm Spout With Rome Travertine Handle Trim Kit Only

24E117BZ/ 24E117BG / 24E117BN/24E117GM / 24E117MB / 24E117CH

Serenity Progressive Wall Basin Mixer 220mm Spout With Arabescato Corchia Handle Trim Kit Only

24E118BZ/ 24E118BG / 24E118BN/24E118GM / 24E118MB / 24E118CH

Serenity Progressive Wall Basin Mixer 220mm Spout With Metal Handle Trim Kit Only

24E120BZ/ 24E120BG / 24E120BN/24E120GM / 24E120MB / 24E120CH

Serenity Progressive Wall Basin Mixer 220mm Spout With Marquina Black Handle Trim Kit Only

24E127BZ/ 24E127BG / 24E127BN/24E127GM / 24E127MB / 24E127CH

Installation Instruction

GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that the installation complies with the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the ceramic cartridge.
- All outlets used primarily for personal hygiene must deliver water at a safe temperature in accordance with regional regulations.

NOTE:

- Do not hydrostatic test the installation with this mixer installed. Damage to the ceramic cartridge may occur.
- Do not remove the ceramic cartridge from the mixer when installing.
- After installation, all connections must be checked for leaks.
- This mixer is not recommended for use in uncontrolled heating systems such as wet-backs or solar heating units unless a suitable tempering valve is fitted.
- If limited water flow is experienced, locate aerator and filter washers and clean away foreign material as required.
- It is the responsibility of the plumber to ensure a waterproof seal is achieved between the product and mounting surface. If in doubt about the quality of the seal, remove the product and reinstall.
- The marble stone hand wheel crafted from natural marble. Each handle boasts unique variations in color, veining, and texture, making every piece one of a kind.

 
MAINTENANCE AND CARE:

- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.
- Avoid contact with highly pigmented substances such as red wine, coffee and ink, as they may cause permanent staining.


FINAL INSPECTION:

- Ensure the tap operates smoothly and that there are no leaks at the connections.
- Clean the area and the newly installed tap with a soft cloth to remove any installation residues.


Installation Instruction

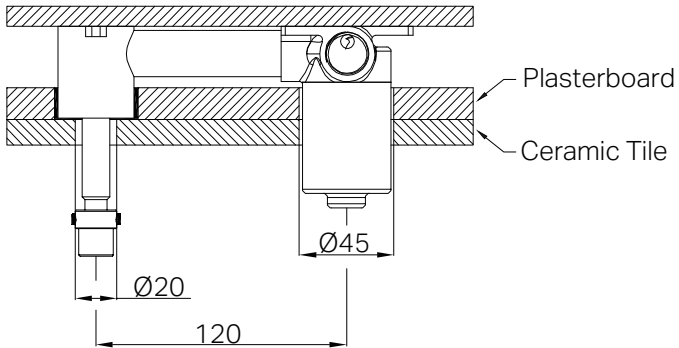

 1. Drill an Ø45mm and a Ø20mm holes in the ceramic tile, then position it as shown in the diagram.

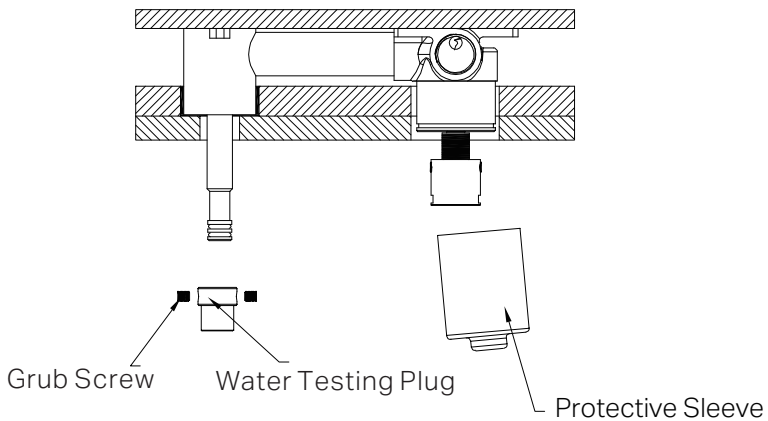

 
2. Release the grub screw to remove the water testing plug.
3. Remove the protective sleeve.

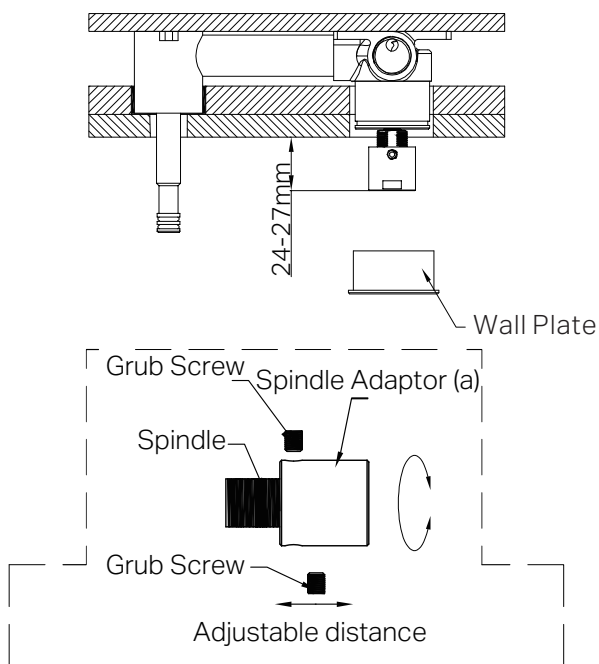

4. Adjust the spindle adaptor (a) to the optimal length, ensuring a distance of 24-27 mm from the tile surface, as shown in the diagram.


5. Loosen the grub screws to make the adjustment.

 Install the wall plate securely onto the mixer body.

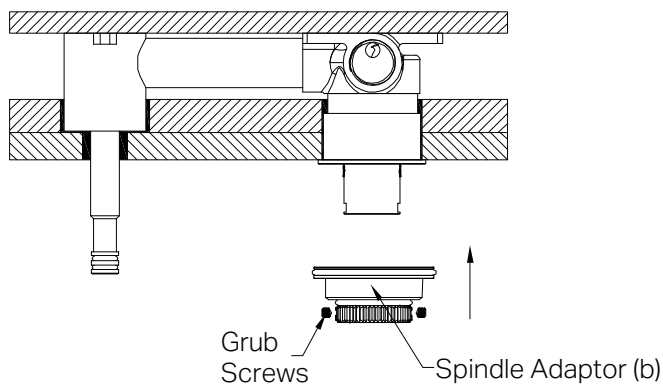

6. Use silicone sealant to seal the gap between the tile, water outlet, and wall plate.

 7. Attach the spindle adaptor (b) to the spindle Adaptor (a) and tighten the grub screws firmly to secure it.

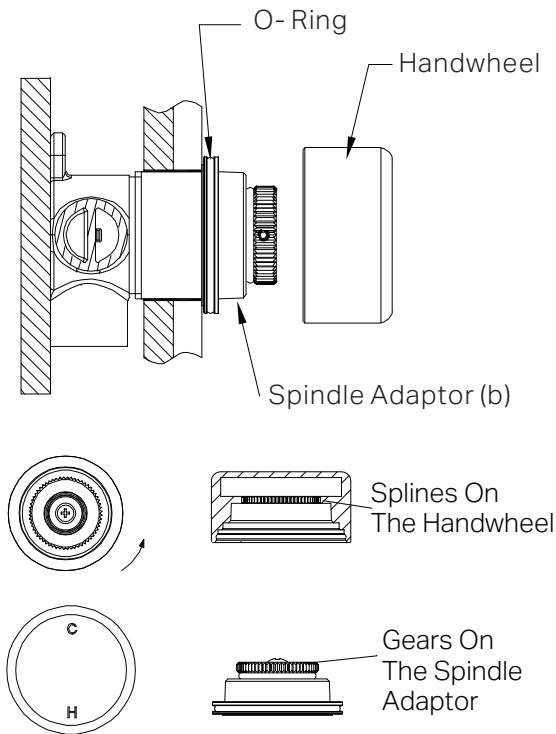

8. Apply lubrication evenly to the O-Ring. Refer to the diagram to identify the correct O-Ring position. Ensure the O-Ring is well-lubricated to prevent damage during installation.

For Metal Handwheel:

Rotate the spindle adaptor (b) counterclockwise to its fully closed position. Refer to the diagram for clarification.

For Marble Handwheel:

No adjustment to the spindle adaptor (b) is necessary.

Align the Handwheel with the spindle adaptor (b):

 
Ensure the spline on the underside of the handwheel align perfectly with the gears on the spindle adaptor (b), as shown in the above diagram. This alignment is crucial for proper functionality.

Secure the Handwheel:


Once aligned, press the handwheel down firmly onto the spindle adaptor (b).

Tip:

For metal handwheels, ensure the handwheel installed as shown in above on the diagram.

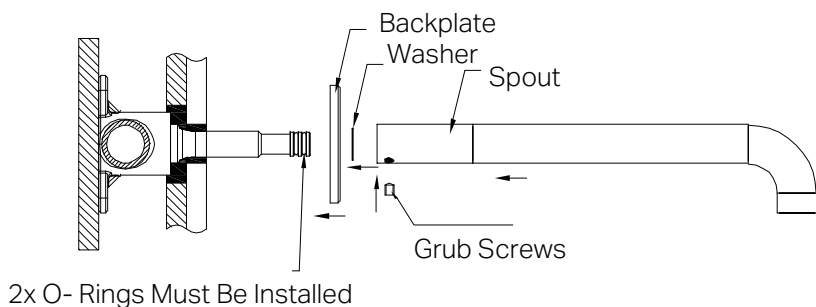

 9. Ensure the spout is aligned and secure it firmly using the supplied two grub screws and ensure that O-rings are properly seated.

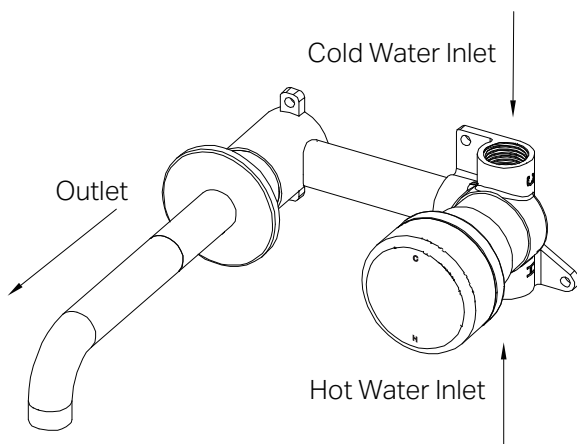

10. Turn on the drainage system and water supply, and inspect all connections for any signs of leakage.

Note: If you bought marble handwheel product, there are no hot/cold markings are applied to the handwheel.

Nero

