

Mecca

Lever Wall Basin/Bath Set


160mm/185mm/220mm

Trim Kit Only

Nero




Lead Free

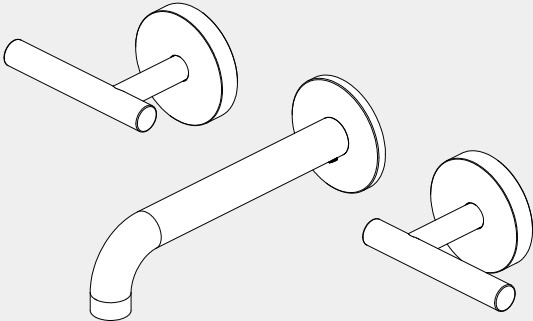

Version : 202606

Drawing

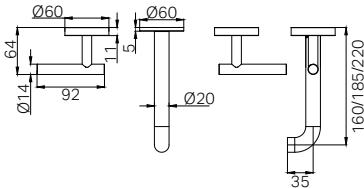

Note: Spout length corresponds to SKU:
160mm → 25D019
185mm → 25D020
220mm → 25D021

Specifications

Watermark License
WM-060073
Temperature Rating
Min 1 °C - Max 75 °C
Pressure Rating
Min 150kpa - Max 500kpa

Finish & SKU

 Chrome 25D019CH/25D020CH 25D021CH	 Brushed Nickel 25D019BN/25D020BN 25D021BN	 Gun Metal 25D019GM/25D020GM 25D021GM
 Matte Black 25D019MB/25D020MB 25D021MB	 Brushed Gold 25D019BG/25D020BG 25D021BG	 Brushed Bronze 25D019BZ/25D020BZ 25D021BZ
 Matte White 25D019MW/25D020MW 25D021MW	 Rome Bronze 25D020RB/25D021RB	 Tumbled Antique Brass 25D020TA/25D021TA


*Dimensions are nominal measurements only.

Packing Includes

- 1x Spout
- 2x Handle Sets
- 2x Spindle Cartridges
- 2x Spindle Connectors
- 2x Waterproofing Sleeves
- 1x Installation Kits

IMPORTANT

- Ensure the spindles and waterproofing sleeves are installed and the waterproofing is completed before installing the tile, stone or marble wall finish, as shown below.




Install The In-wall Breech



Install Spindle Cartridge



Fit Waterproofing Sleeve

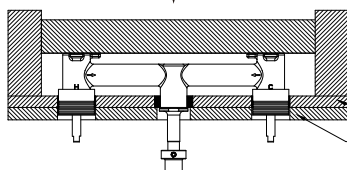

Apply waterproofing membrane and then install the tile/stone/marble wall finish.

Plasterboard
Tile/Stone/Marble

INSTALLATION INSTRUCTIONS


GENERAL INFORMATION

- This product must be installed by a licensed plumber. Ensure that the installation complies with the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the ceramic cartridge.
- All outlets used primarily for personal hygiene must deliver water at a safe temperature in accordance with regional regulations.

NOTE



- Do not hydrostatic test the installation with this mixer installed. Damage to the ceramic cartridge may occur.
- Do not remove the ceramic cartridge from the mixer when installing.
- After installation, all connections must be checked for leaks.
- This mixer is not recommended for use in uncontrolled heating systems such as wet-backs or solar heating units unless a suitable tempering valve is fitted.
- If limited water flow is experienced, locate aerator and filter washers and clean away foreign material as required.
- It is the responsibility of the plumber to ensure a waterproof seal is achieved between the product and mounting surface. If in doubt about the quality of the seal, remove the product and reinstall.

PARTS NAME

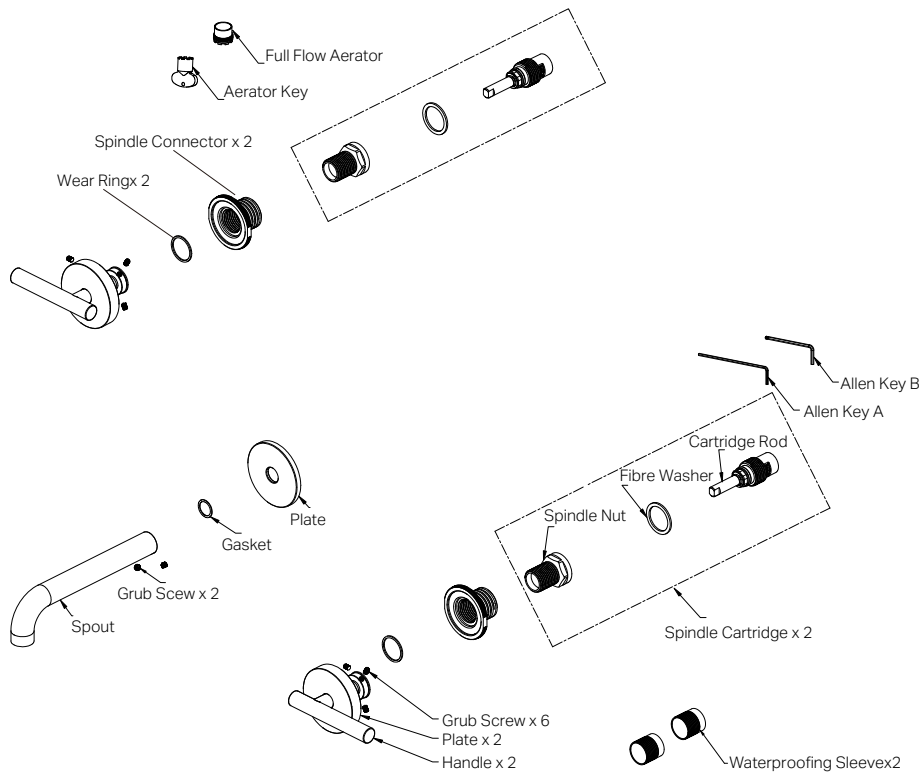

INSTALLATION STEPS FOR Trim Kit

This trim kit is compatible with bodies 25D016 (center spout position) and 25D017 (offset spout position). The following instructions illustrate the installation procedure with mixer body 25D016. Installation with mixer body 25D017 is similar.

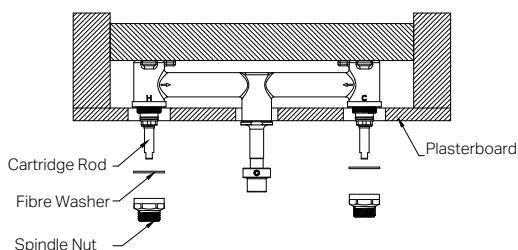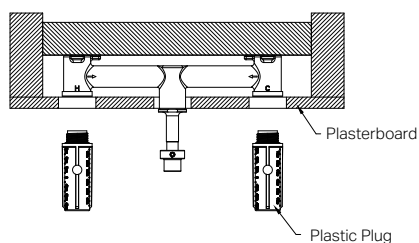

1. Remove the plastic plug on both sides.

2. Tighten the cartridge rod firmly into the in-wall breach with a torque wrench.


Recommend torque: 6–8 Nm.

3. Place the fibre washer onto the cartridge rod.

4. Tighten the spindle nut onto the cartridge rod with a torque wrench.


Recommend torque: 15–18 Nm.

5. Turn on the water to test the spindle cartridge, ensuring there are no leaks.

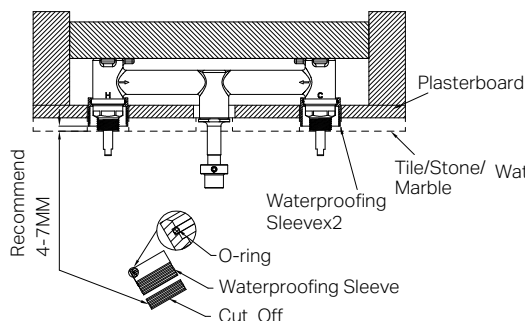


6. Fix the waterproofing sleeves with an O-ring onto the body properly.


Temporarily reference the finished tile/stone/marble surface and mark the waterproofing sleeves 4–7mm below the finished surface level. Remove the sleeves and cut them at the marked position.

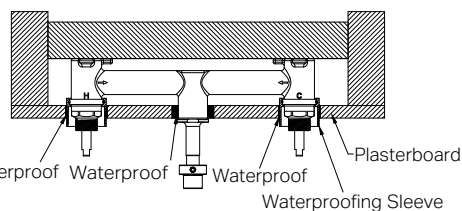

7. Apply waterproofing membrane to the gaps where the plasterboard, waterproofing sleeve, and outlet fitting meets.

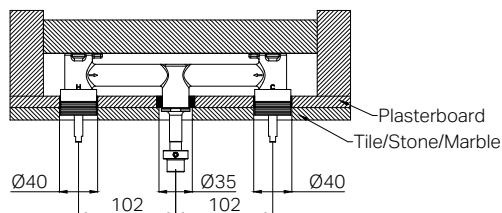


8. Install the tile/stone/marble and drill three holes as shown in the diagram.

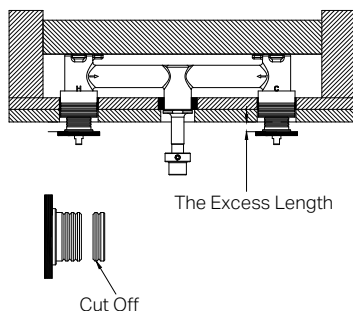


9. Screw the spindle connectors onto the spindle nuts and measure the length protruding beyond the finished tile/stone/marble wall surface.

10. Remove the spindle connectors and cut off the excess length.

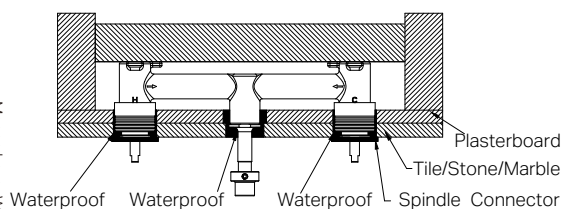

11. Fix the cut spindle connectors onto the spindle nuts, ensuring they sit flush against the finished tile / stone / marble surface.


12. Apply waterproofing membrane to seal the gaps around the tile / stone / marble surface, waterproofing sleeve, spindle connection and outlet pipe.

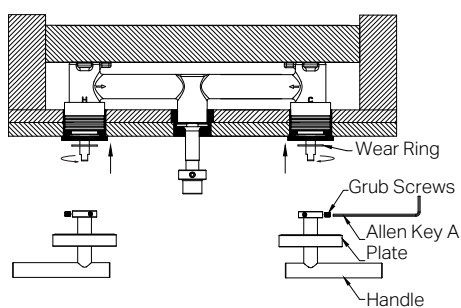

13. Slide the wear ring onto the spindle connection.


14. Rotate the left spindle clockwise and the right spindle counter-clockwise to the OFF position. Attach the handle and plate, ensuring the handle stem is aligned as shown.

15. Slide the plate outward and tighten the grub screws on both handles using the Allen key A.

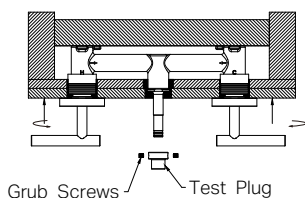


16. Slide the handle plates inward and hand-tighten until secure.

17. Remove the test plug from the outlet pipe.

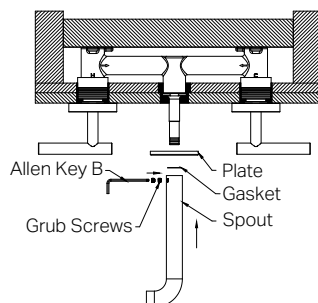

18. Slide the plate, gasket and spout onto the mixer body. Secure the spout using the grub screws and Allen key B.

Note: Apply silicone sealant around the mounting hole.

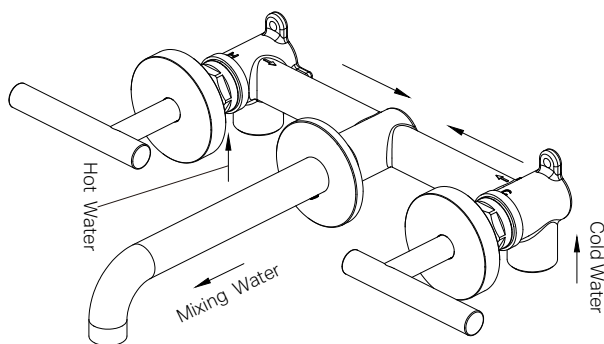

Installation Complete (Off Position)

19. Turn on the water supply and check all connections for leaks.

FINAL INSPECTION

- Ensure the product operates smoothly and that there are no leaks at the connections.
- Clean the area and the newly installed tap with a soft cloth to remove any installation residues.

MAINTENANCE AND CARE

- Regularly check the product and connections for signs of wear or leaks.
- Clean the product with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.

Nero

