


Mecca Shower Mixer With Diverter Separate Back Plate

Nero

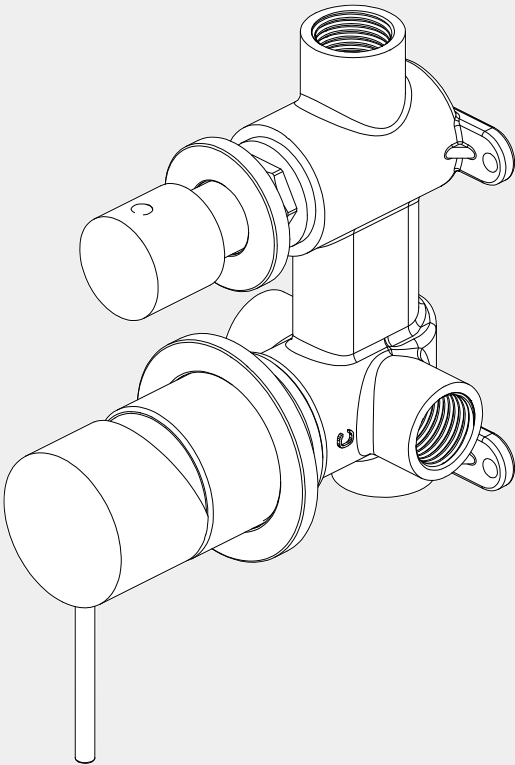

Lead Free



Version: 202606

Drawing	Specifications	Group Item
	Watermark License WM-060073	1x Universal Body 1x Trim Kit Only
	Temperature Rating Min 1°C-Max 75°C	
	Pressure Rating Min 150kpa - Max 500kpa	
Finish & SKU		
Chrome NR221911sCH Gun Metal NR221911sGM Brushed Bronze NR221911sBZ Brushed Nickel NR221911sBN Matte Black NR221911sMB Brushed Gold NR221911sBG Matte White NR221911sMW Rome Bronze NR221911sRB Tumbled Antique Brass NR221911sTA		


*Dimensions are nominal measurements only.

GENERAL INSTRUCTIONS:

-
- ceramic tile
- plasterboard
- Ø40
- (4)
- (3)
- Ø50
- (2)
- (1)
- recommend 68-78mm
- cut off



3. Drill a $\phi 50\text{mm}$ and a $\phi 40\text{mm}$ hole in the plasterboard for mixer body, and then position plasterboard as shown in the above image.

6.Reattach self-tapping screw, washer and plastic sleeve.

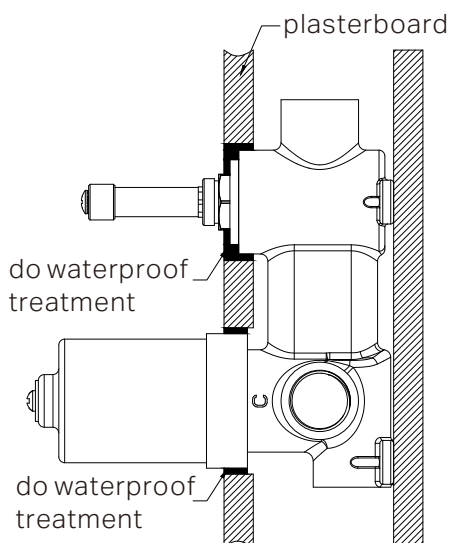


A technical line drawing of a 3-way ball valve assembly. The assembly consists of a main body with three ports. One port at the top is a standard threaded connection. A side port has a long, threaded stem extending outwards, which is connected to a handle with a circular grip. The bottom port is a larger, flanged connection with a threaded end. The drawing shows the internal ball mechanism and the handle's connection point.

Installation Instruction For Trim Kit Only

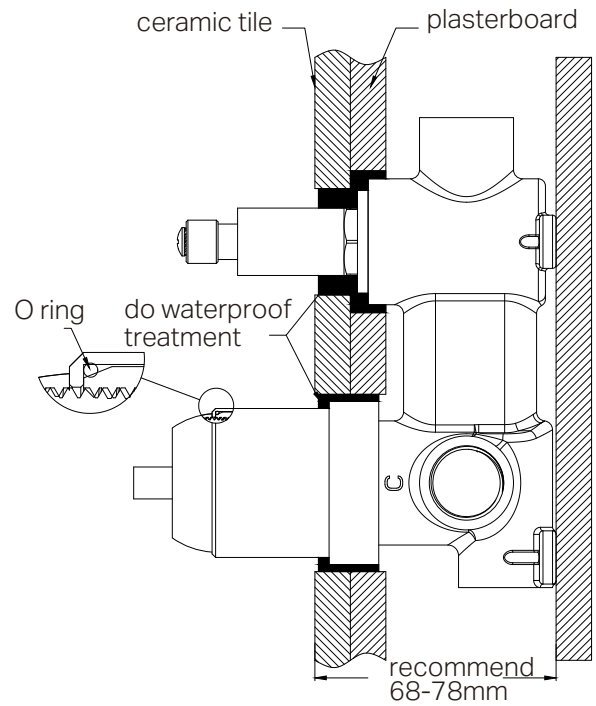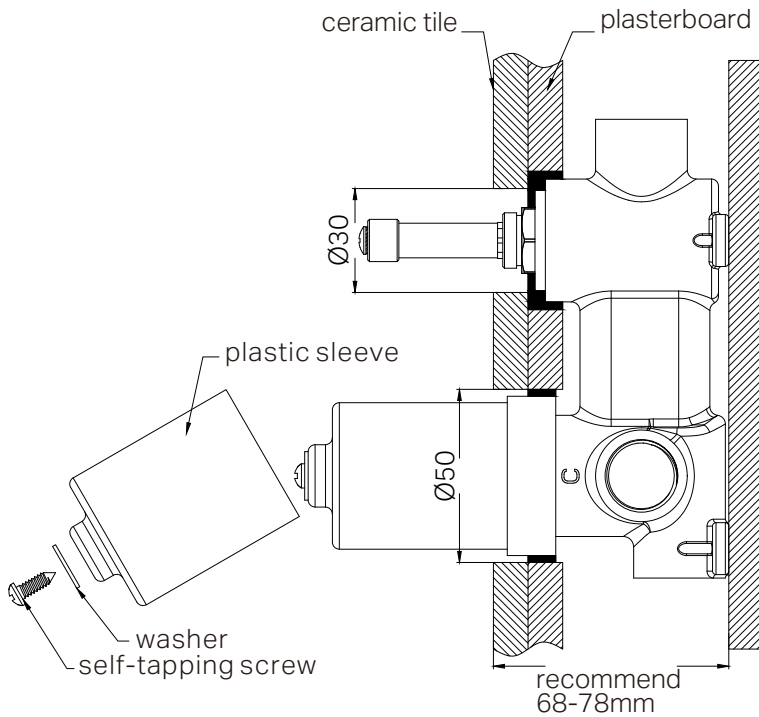

1. Drill a Ø50mm and a Ø30mm hole in the ceramic tile, then position it as shown in the above diagram.
2. Undo the self-tapping screw to remove the plastic sleeve.

3. Insert the O ring to the dressing bell groove, and slide the cartridge bell onto cartridge and slide Diverter dressing bell onto Diverter cartridge.
4. Apply waterproof treatment to the area indicated in the diagram above.
5. Tighten up the dressing ring on the cartridge bell.

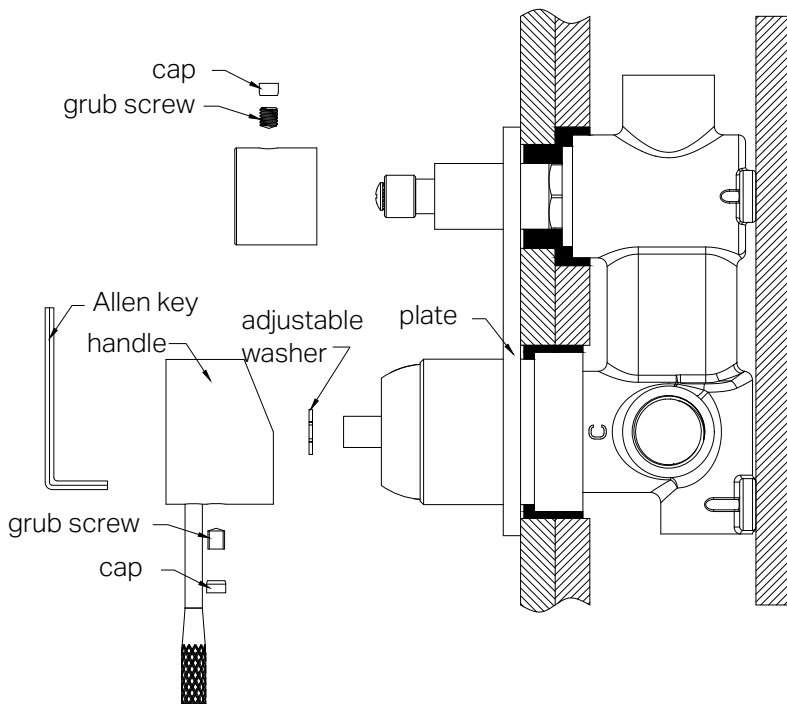

6. Slide the backplates onto body.
7. Attach the washer to cartridge rod, position the handle, tighten it with a grub screw using an Allen key, and cap the grub screw hole.
8. Put knob onto Diverter cartridge, tighten it with grub screw using Allen key, and cap the grub screw hole.

MAINTENANCE AND CARE:

- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.

FINAL INSPECTION:

- Ensure the tap operates smoothly and that there are no leaks at the connections.
- Clean the area and the newly installed tap with a soft cloth to remove any installation residues.

Nero

